



STEP 1:

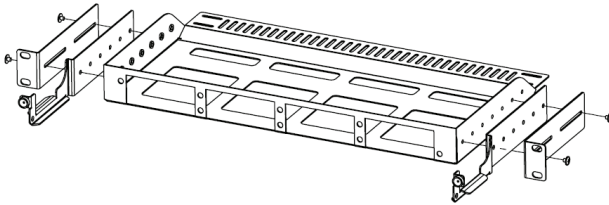

Assemble the door mounting bracket and side bracket with the screws supplied in the zip lock bag as below pic show.

STEP 2:

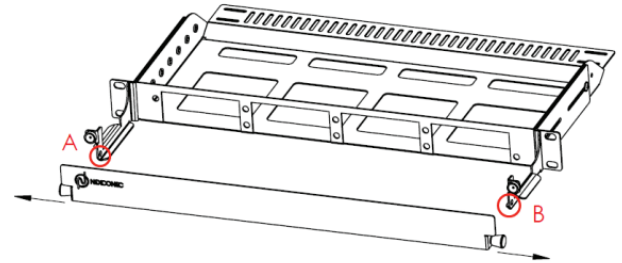

Assemble front door: pull the spring plungers outside and then plug it into the holes A & B.

For more information please visit us
nexconec.com

