

INSTRUCTION MANUAL

STEP 1:




Remove approximately 50mm of the cable sheath and separate the 4 pairs.

STEP 3:



Remove the foils from all of the pairs of wires, taking care to cut them back as close as possible to the end of the cable sheath.

STEP 5:

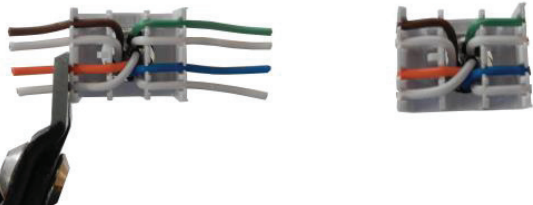

Cut the wires flush with the outside edge of the wire retention cap.


STEP 7:



Close the rear covers of the jack. They should lock closed with an audible 'click'.

STP KEYSTONE JACK – TOOLLESS TERMINATION

STEP 2:

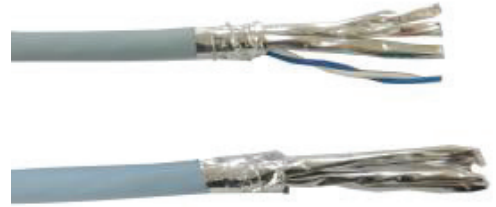

If using U/FTP cable fold the foil of one of the pairs back and wrap it around the outside of the cable sheath with the silver surface on the outside.

If using F/FTP cable fold the overall foil back and wrap it around the outside of the cable sheath with the silver surface on the outside. Wrap the drain wire around the outside of the foil and sheath.

If using S/FTP cable peel the braid back on itself.

STEP 4:



Pass the wires through the hole in the rear of the wire retention cap and dress the wires in to the appropriate coloured slots following the preferred wiring configuration.

STEP 6:



Fit the wire retention cap to the rear of the jack (it will only fit one way round) and push it down to seat the wires in to the IDC slots.

STEP 8:



Secure the cable using a cable tie around the cable clamp flanges.

For more information please visit us
nexconec.com

