

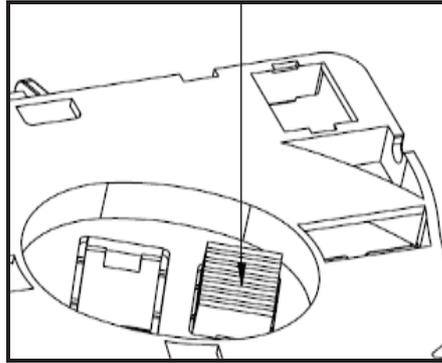
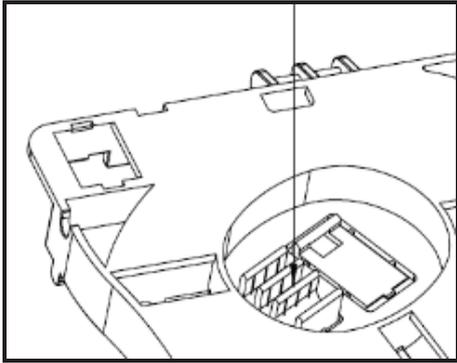




Step 1: Use thumb to press down the cable holders and covers to release them from the splice tray.

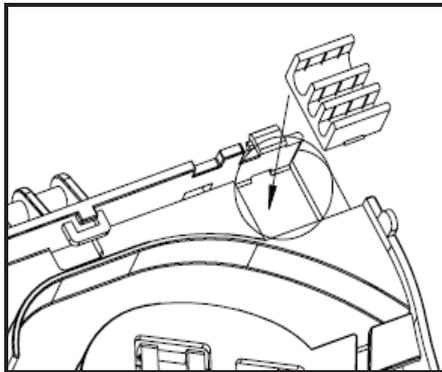


Step 2: Insert the holders into their slots on each side of the splice tray as shown below.

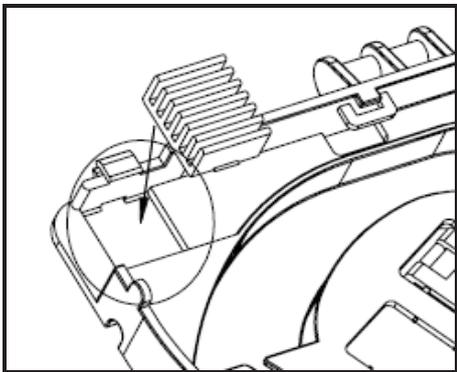

Step 3: Then assemble the covers on the top corners of the tray, the covers will hold the entry and exit cables from popping it.

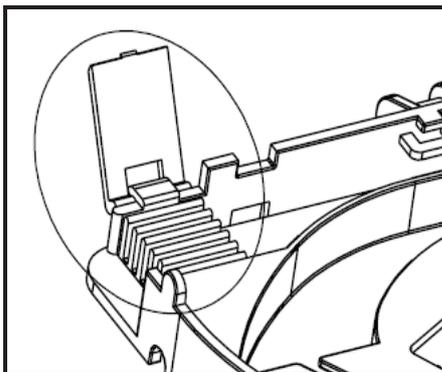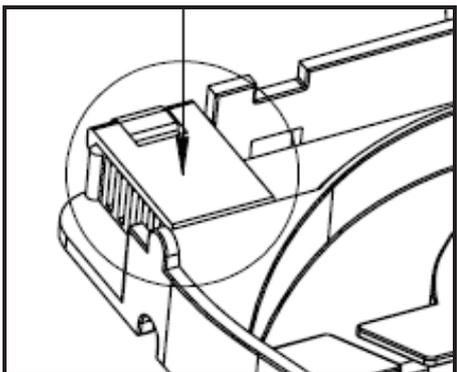

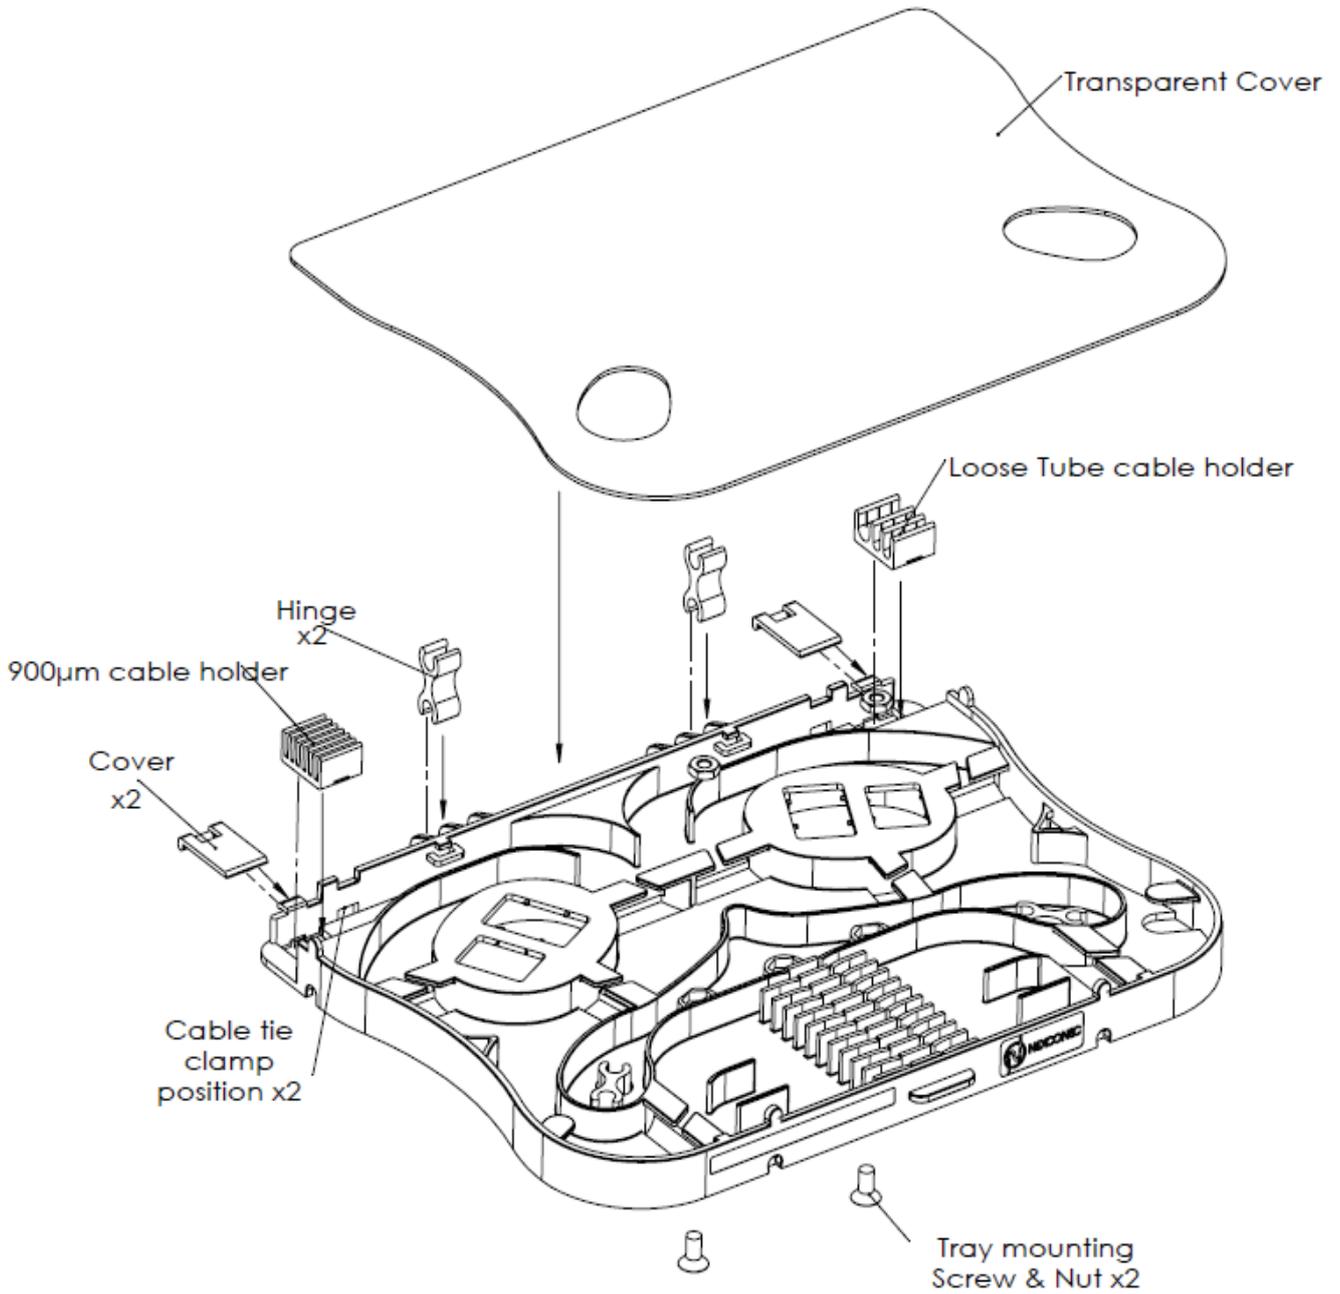

For more information please visit us
nexconec.com

